



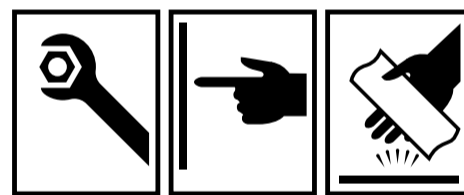

Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD,

- 1 - B 961856 XX ❄️
- 1a - B 961857 XX
- 2 - S 961055 NU
- 3 - A 861244 NU ❄️
- 3a - A 861243 NU
- 4 - S 9595 NU
- 5 - B 961836 NU
- 6 - E 960111 NU
- 7 - B 960481 XX
- 8 - B 960168 XX
- 9 - A 960944 NU
- 10 - B F175 XX
- 11 - B 1364 XX
- 12 - B 9400 XX

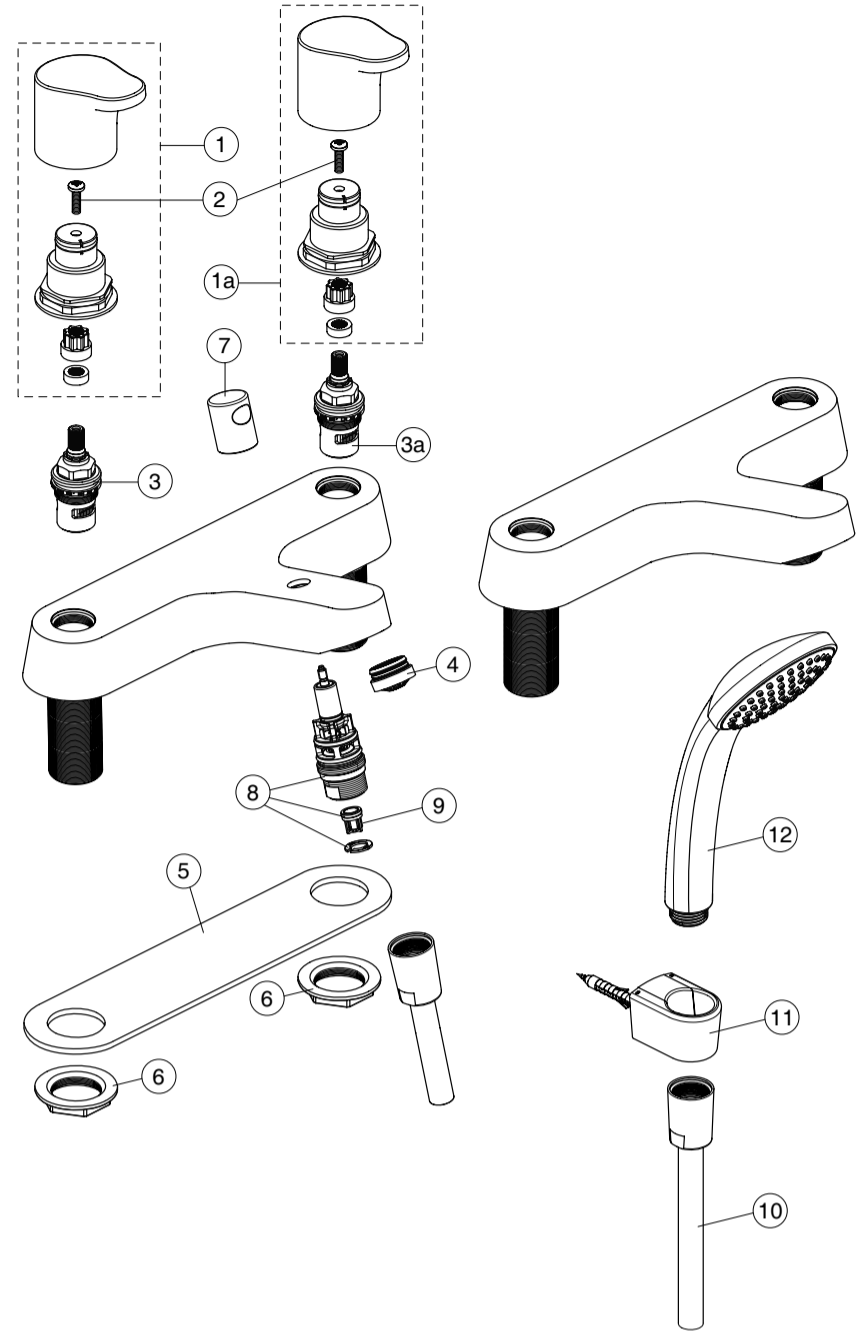


CERABASE




Ideal Standard

08.2022 / B565298

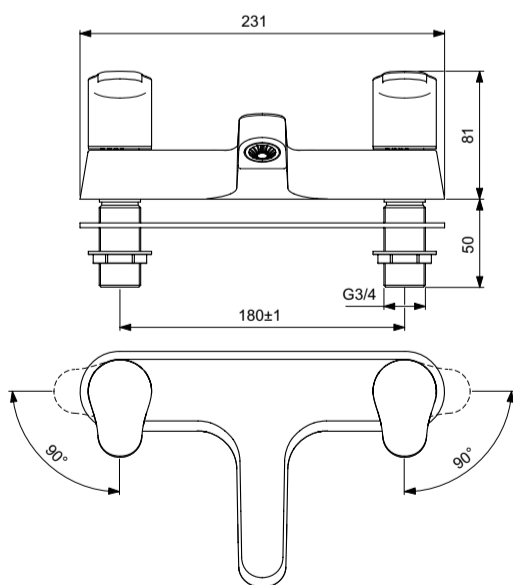

B D057 ..

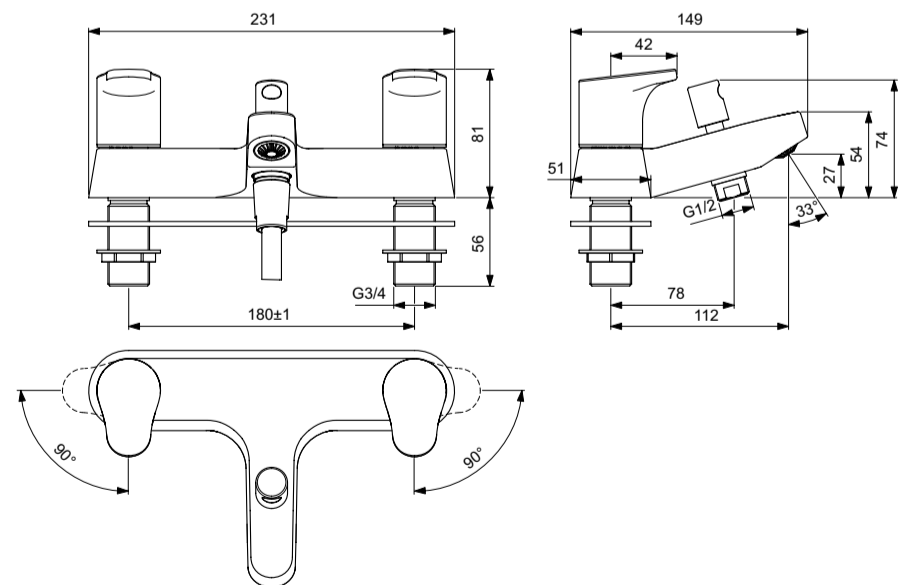






B D058 ..



Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

<http://www.idealstandardinternational.com>

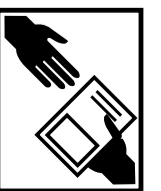

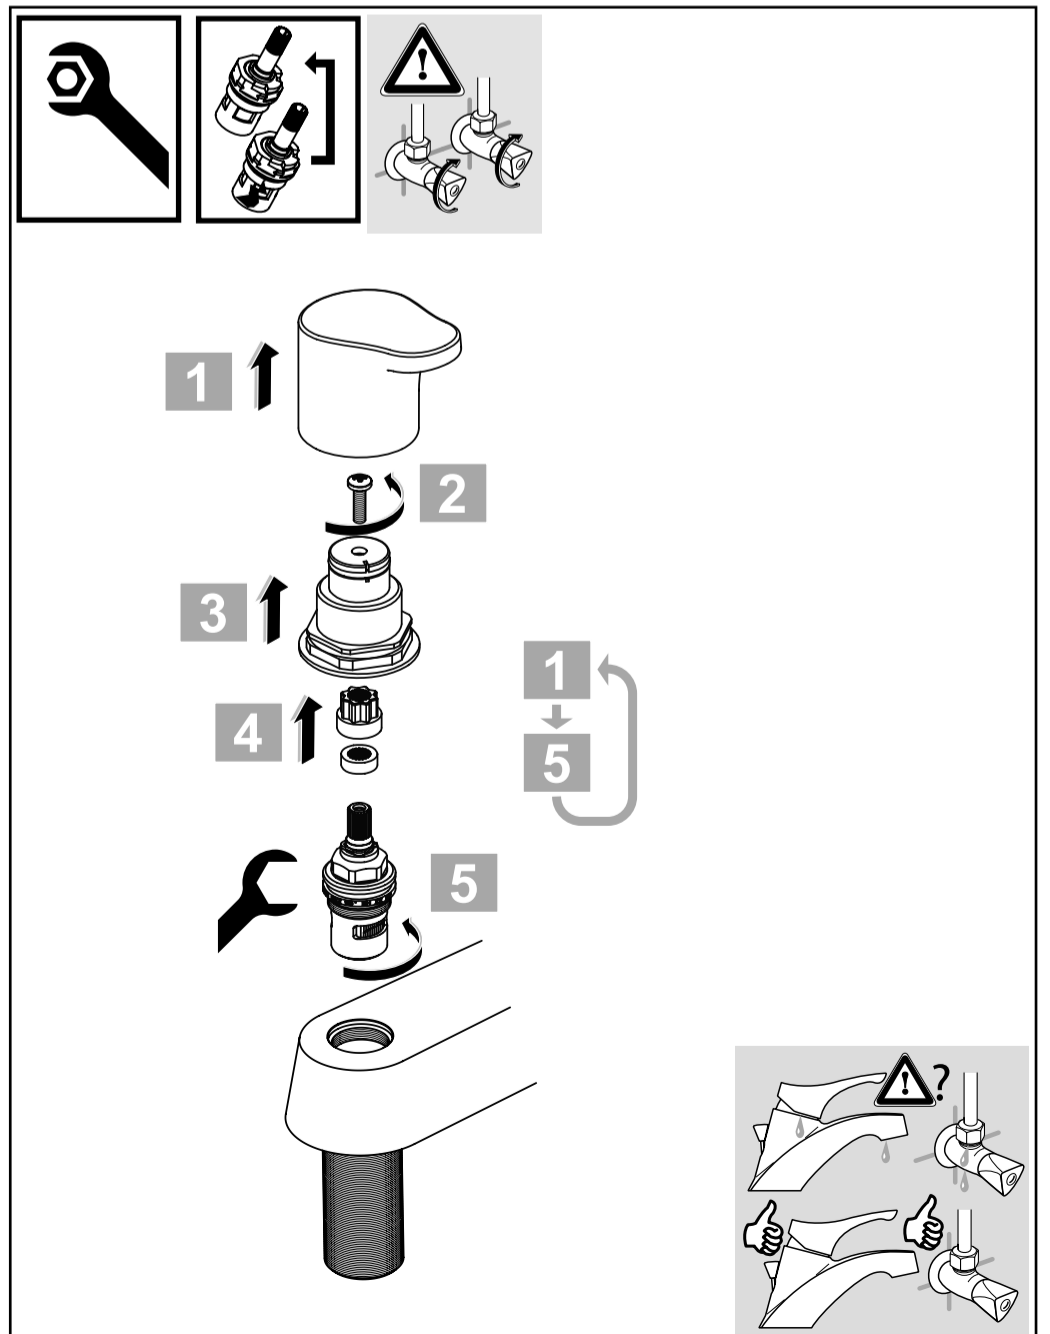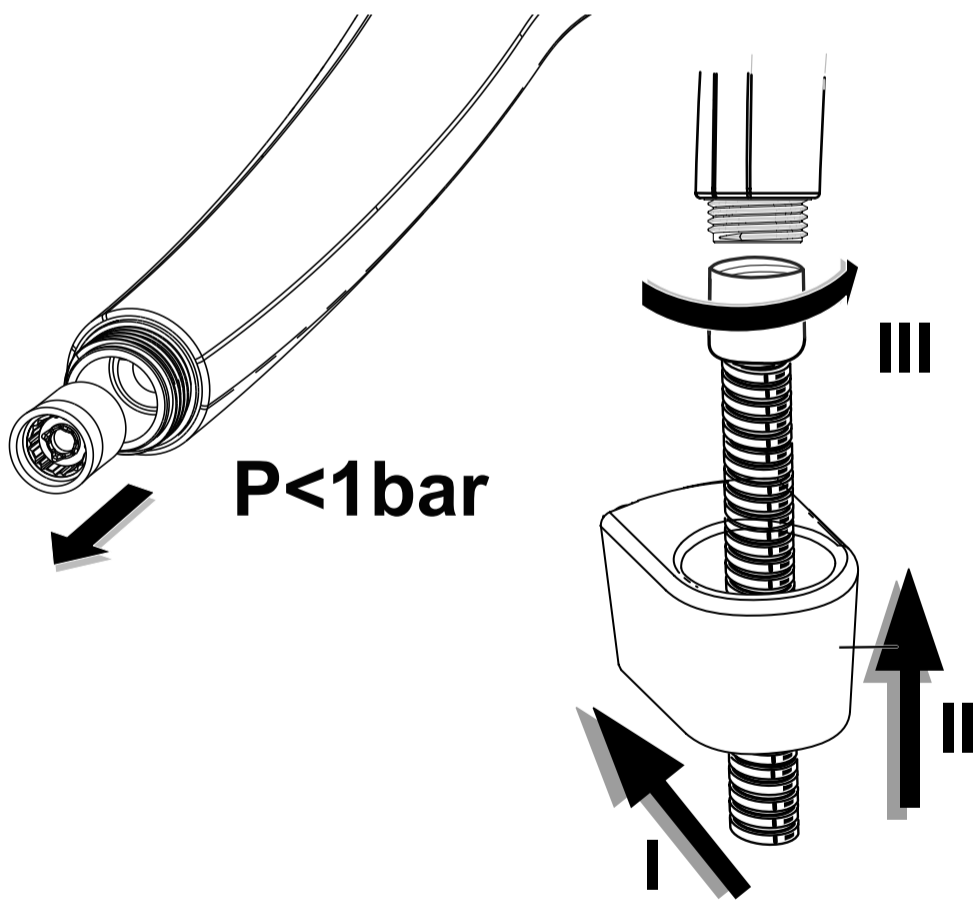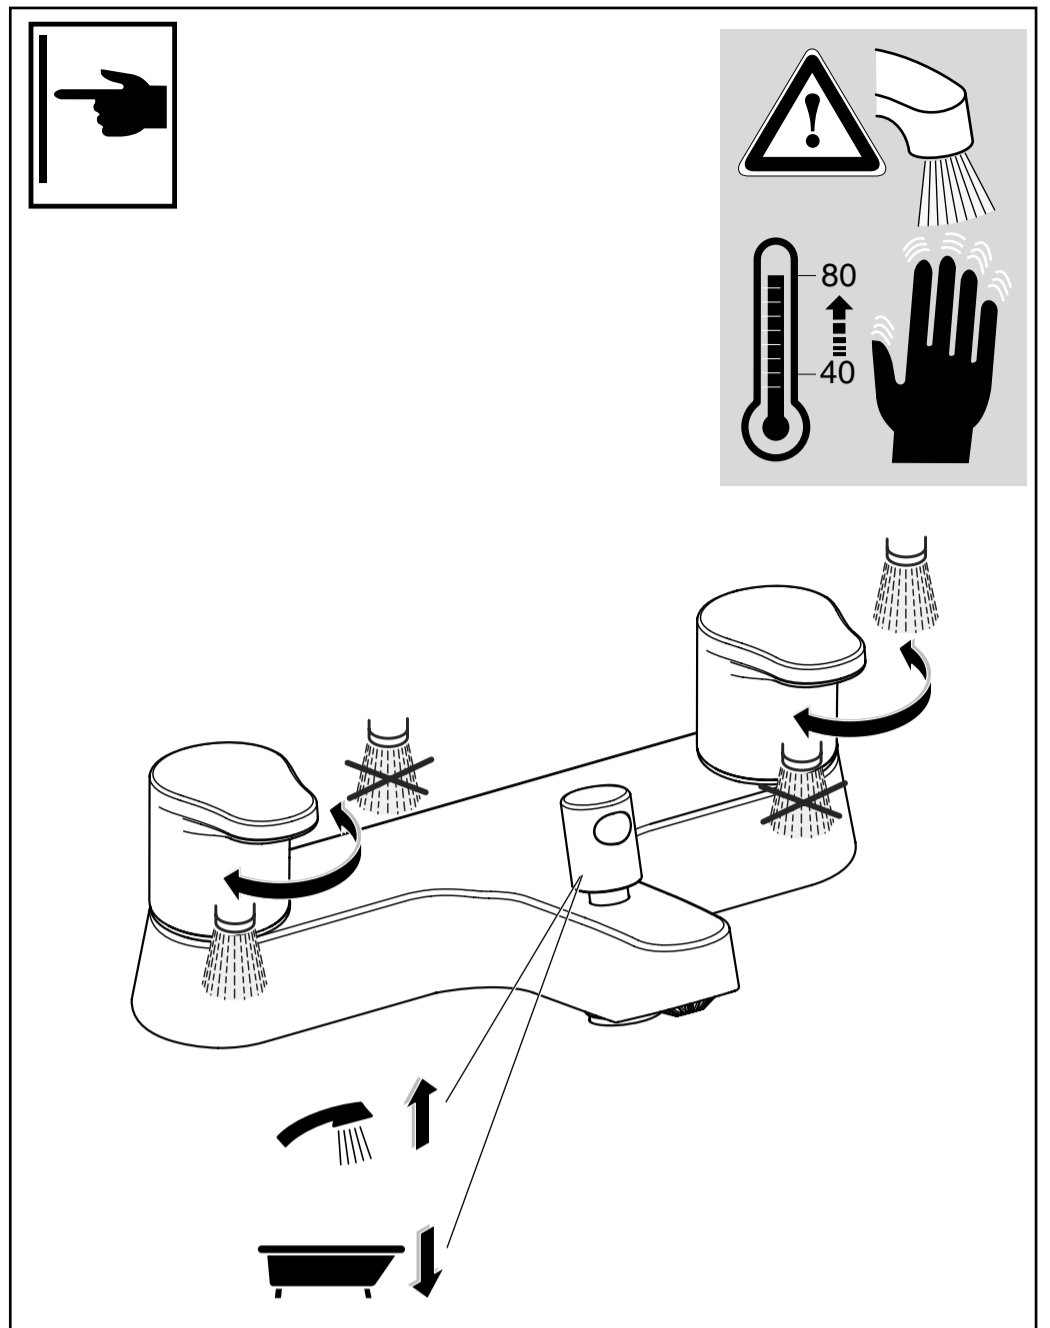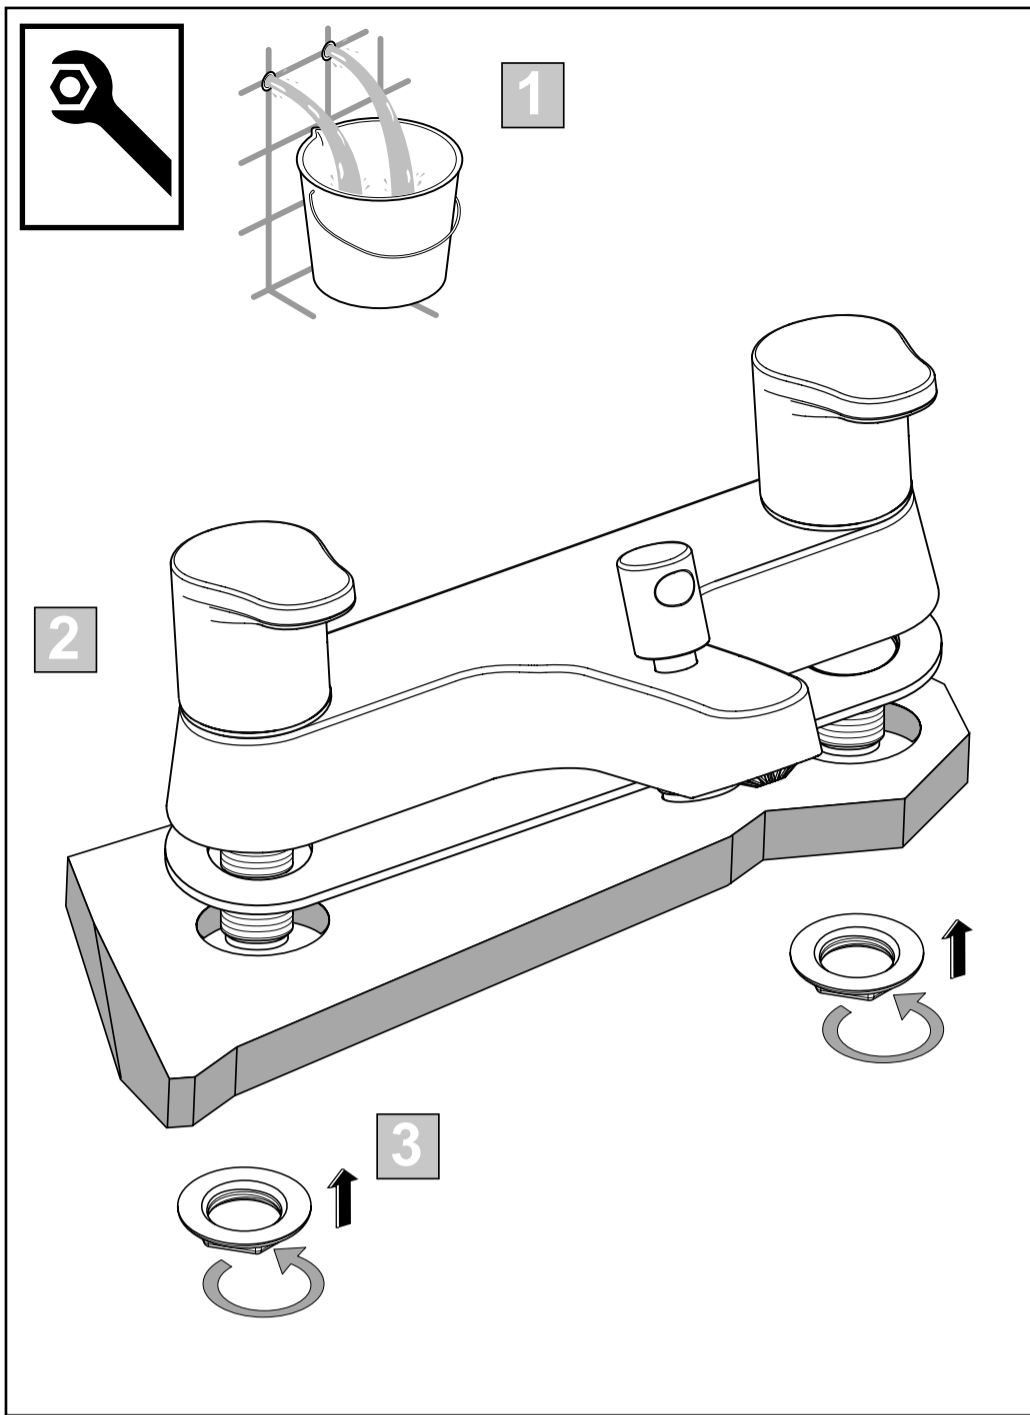

| | | | | |
|-------|----------------|----------|--|----------------|
| P bar | MAX. 10 0,2 | 3 0,2 | | Q (0.2 bar) |
| T °C | MAX. 80 | 65 40 | | |
| | | | | I/min 15 8 |