

INSTALLATION GUIDE




NO MORE LEAKS

Shower & Bath Sealing Kit


YouTube
SCAN TO
WATCH



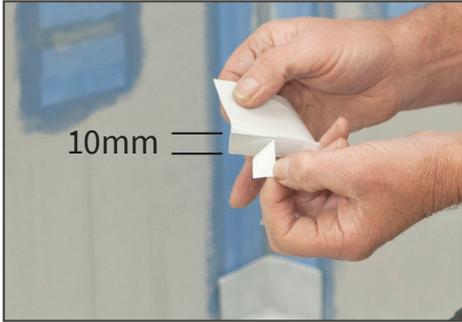

Step 1
Peel film from 10mm section of self adhesive corner. Adhere 10mm section to the top of the acrylic tray/bath.

Note: If you are fitting thin tiles (i.e. glass mosaics) you may want to reduce the width of the adhesive strips by using a safety blade or scissors.

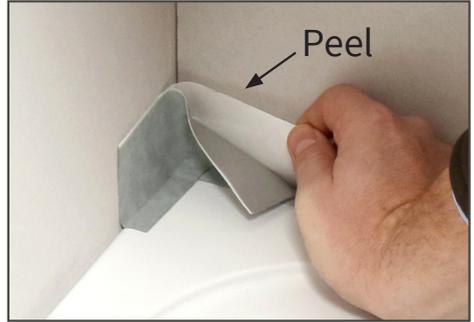

Step 2
Peel film from the back of the self adhesive corner and adhere it to the wall.



Step 3
Use roller to make sure internal waterproof corner is securely adhered in place.



Step 4
Measure the lengths of self adhesive tape required using a tape measure, then cut from the roll accordingly using a safety blade or scissors.

Note: The lengths of tape should overlap the internal corners by 20mm approx when in position.



Step 5

Peel film from 10mm section of self adhesive tape and stick to top of acrylic shower tray/ bath



Step 6

Peel film from the back of the self adhesive tape and adhere tape to the wall.



Step 7

Use roller to make sure tape is adhered securely to the wall.



Step 8

Follow previous 3 steps around all other areas of tray/bath. You now have a fully waterproof tray/bath with no leaks to worry about!



SCAN TO WATCH

Scan this QR code with your mobile's QR reader to watch our installation video.

